




LORE AND LEAD · DOPE



Printer check

Print this at 100%, Actual size.
Both bars should be 10 cm.
A bank card should fit the outline.

ACROSS



DOWN

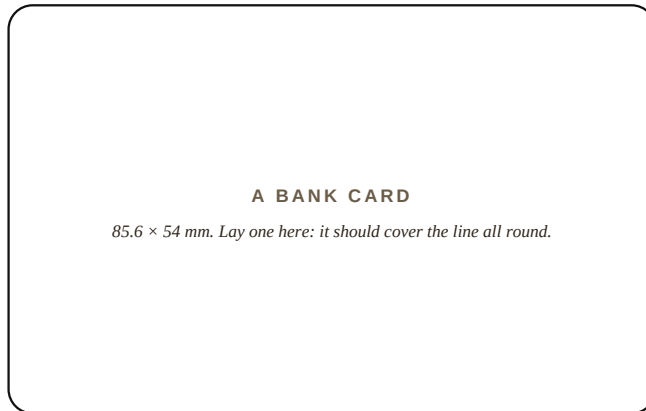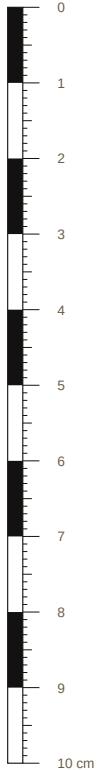

1 Print this page at 100%, Actual size, not Fit to page.

Pick Actual size or 100% in the print settings, and turn off Fit to page and Scale to fit.

2 Measure both bars with a ruler.

Each should be exactly 10 cm. A printer can be out one way and not the other, so check both.

3 Lay a bank card on the outline.

It should sit exactly on the line, all the way round.

4 Look for the four corner marks.

They sit 5 mm in from the edges of the paper. Every Dope sheet keeps its print inside them, so if all four printed, nothing of Dope's gets cut off.

5 Out by more than a millimetre?

Something is scaling the page. Find Actual size, 100% or Scale in the print settings and print it again. If your phone's print sheet has none, save the PDF and print it from a computer, or type what a target's bar measures into Dope.